
EEC -DIRECT- (WITHOUT CONTROL)

1- 230V Supply motor through N and L

MOTOR OUTPUT SALIDA MOTOR

2- Make a jumper between terminals +12 and 0-10V (VSP) of the control

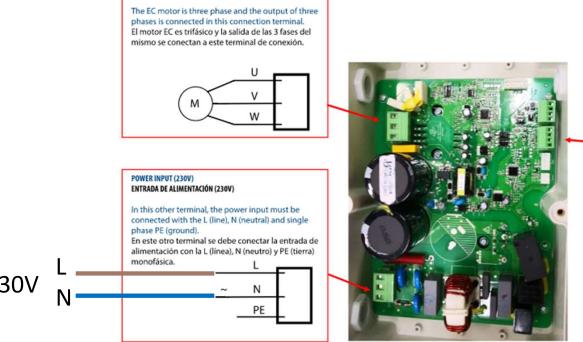

CONTROL: 0-10 INPUT CONTROL: 0-10 ENTRADA

The fan is adjustable in rpm and has a variable input

You can connect any accessory or external device that gives this variable signal (for example: temperature sensor, inverter, etc.). In case you want to operate the fan at maximum revolutions, you should connect VSP (0-10V) and +12 directly.

El ventilador es regulable en RPM y tiene una entrada variable de 0 a 10V.

Se puede conectar algún accesorio o dispositivo externo que dé esta señal variable (por ejemplo, sensor de temperatura, variador, etc.). En caso de que se quiera hacer funcionar el ventilador a máximas revoluciones se debe conectar directamente VSP (0-10V) y +12.



230V