




## FIXING INSTRUCTIONS

### UNIVERSAL TILE VENT TERMINAL WITH 125MM OR 150MM SPIGOT

- Five colours: Red, Brown, Grey, Terracotta, Red Streak
- Fade retardant uv stable surface treatment proven in use over 15 years
- Not suitable for use with: Plain Tiles, Clay Single Pantiles, Forticrete Centurion, Goxhill Gaelic Tiles, Double Lap or Interlocking Slates


**1.** Decide on a suitable position for the Universal Tile Vent Terminal between rafters and tiling battens.

Lay tiles up to the course below this position. Cut an X in the underlay and fold flaps upwards and outwards. Make a slit in the underlay above the tile batten, slide the Underlay Protector under the batten and into the slit.

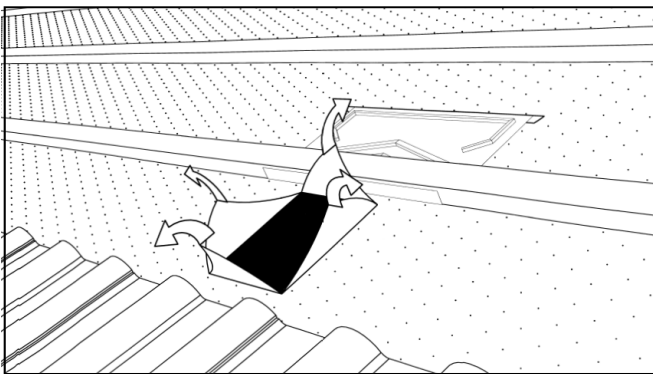


**2.** Fit the Universal Tile Vent Terminal in position and nail to the batten.


For profiled tiles, ensure roof covering is clean, dry and dust free. Remove protective backing and dress the front AluFlash apron onto the tiles below to ensure a weatherproof junction.

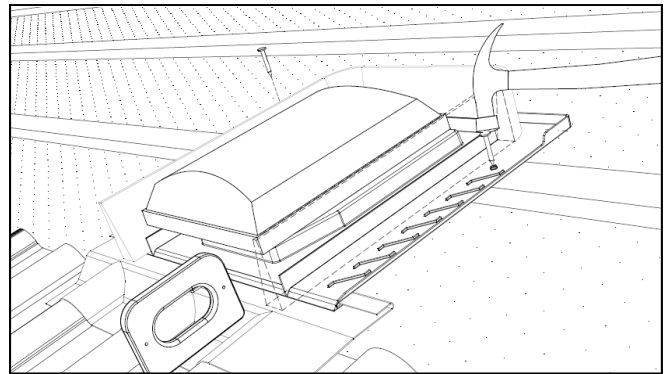

**3.** Lay the next course of tiles, overlapping the Universal Tile Vent Terminal on each side and compressing the foam filler. It may be necessary to remove adjacent tile nibs to prevent tiles “kicking-up”. Fix adjacent tiles where necessary.

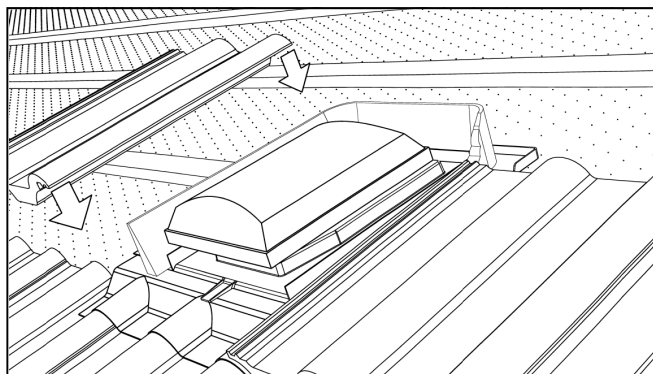

**4.** Continue tiling in the normal way.

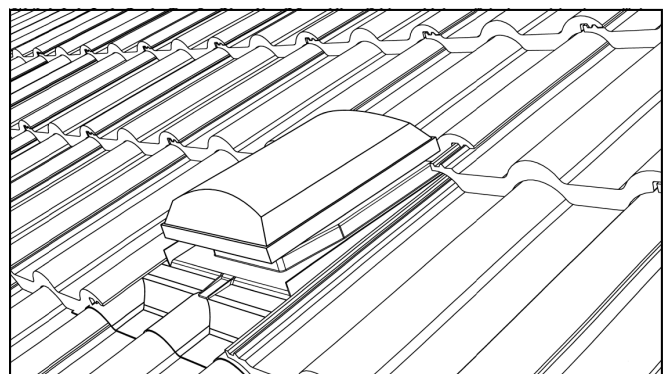

**SUITABLE FOR ROOF PITCHES OF BETWEEN 20° AND 60° -  
FOR PITCHES ABOVE OR BELOW THIS CONSULT VORTICE TECHNICAL SERVICES**

#### Vortice Limited

Beeches House, Eastern Avenue, Burton on Trent, DE13 0BB

Tel: +44 (0) 1283 492949

Fax: +44 (0) 1283 544121

[www.vortice.ltd.uk](http://www.vortice.ltd.uk)